



FISHER & PAYKEL

DISHWASHER DRAWER

ADDING POWDER DETERGENT

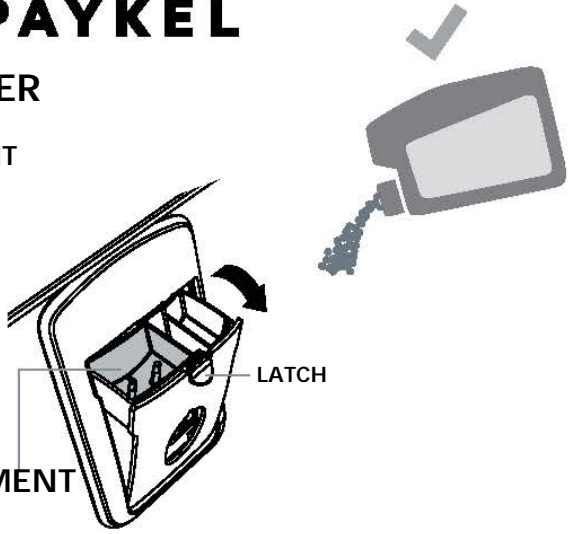

1. HALF FILL SMALL POWER COMPARTMENT

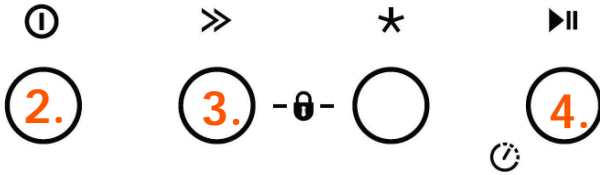

1. Half fill with Powder
2. Push on POWER
3. Select ECO or FAST
3. Push START